

Installation Guideline

Literature Part # MNL453

Proper SD Card Removal

SD Card Part Numbers:

32GB DV452, 64GB DV453, 128GB DV454, 256GB DV455

Removing the Recorder from the bracket without powering the unit completely off will result in the following:

- Corrupted Video Files
- Corrupted SD Card
- Shorting or damaging the camera

Carefully follow the instructions below for the proper handling of your SD Card.



Turn the vehicle off. The screen will dim



Press and hold the driver event button



Release after you see "SHUT" on the display



Unlock the 2 locks on both sides of the recorder



(1) Swing the recorder from the bottom upwards until resistance is felt, (2) then push up



Insert or remove the card by pushing down into the slot



If the SD card is installed incorrectly you will see "nOSd"



If you install a DVXC4 into a vehicle it wasn't assigned to you will see "InSd"

