



CYL-V Camera Installation Guide

This guide will show the proper procedures to install a CYL-V Camera in your vehicle. Please follow the Installation Technique Guideline for proper power & ground connections

For Technical Support please contact our support team at:

Techsupport@Roscovision.com





CYL-V Camera Installation Guide

Step 1 – Component Layout:



- A – Bracket Cable
- B – Camera Housing
- C – Micro USB Cable
- D – Camera
- E – Keys
- F – Power Box





CYL-V Camera Installation Guide

Installation Layout



- A – Wire Routing
- B – Bracket Mounting
- C – Power Connections





CYL-V Camera Installation Guide

Step 1 – Recorder Bracket Mounting

IMPORTANT: VHB Tape should only be applied when windshield temperature is within 50°F-100°F (10°C-38°C) to allow proper curing of mounting adhesive pads.

- Make sure the mounting area on the windshield is clean and free from debris
- Heat the windshield by running the defrost on high heat
- Mount the Bracket to the windshield in a location that will not distract or cause an obstruction to the driver (A)
- Apply pressure for 30 seconds to ensure permanent bond to the windshield
- Route the cable attached to the bracket in the headliner & down the A-Pillar (B)

Do not interfere with the vehicle's airbag! Use EXTREME CAUTION when routing down the A-Pillar







CYL-V Camera Installation Guide

Step 2 - Power Connections

Please review the Installation Techniques Guideline before proceeding

- Connect the RED wire on the CYL-V harness to the vehicles CONSTANT wire
- Connect the YELLOW wire on the CYL-V harness to the vehicle's ignition wire
- Connect a ring terminal to the BLACK wire and connect it to chassis ground (A)
- Secure your connection with Zip Ties to prevent disconnects (B)
- Connect the power harness to the bracket connector routed in step 1 (C)

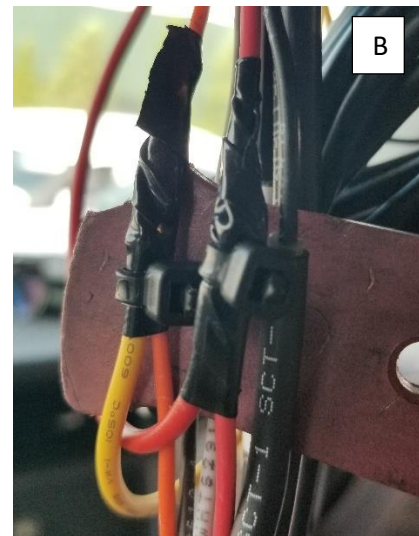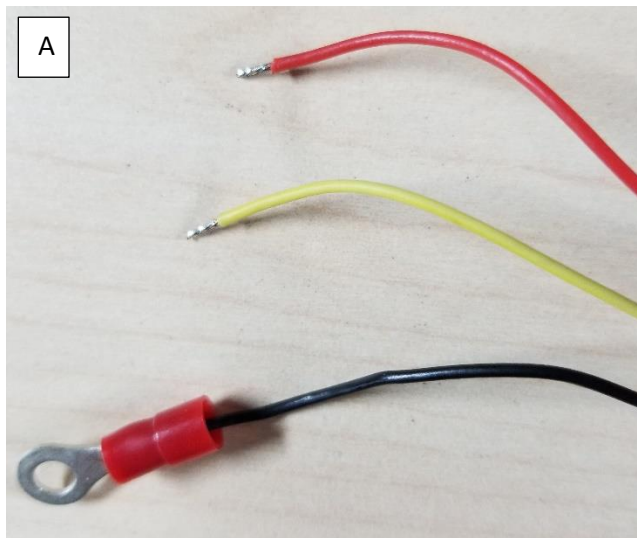

Power
Cable
Connector

Bracket
connector

Make sure the arrows are lined up before connecting to prevent damage to the inside of the cable connectors





CYL-V Camera Installation Guide

Step 3 – Attaching the Recorder to the Bracket



- Push and hold the lock button on the bracket (B)
-

