

Installation Guideline

Literature Part #MNL402T

Bracket Adjustment Tool

Part #Tool1130 & Tool1131

Related Parts:

Tool1130 – 1985-2018 Ford Econoline/ Tool1131 – 2012-2018 Hino Trucks

DV443 – Hardware Kit (Temporary & Permanent VHB Tapes with Primer Pen, Allen Wrench, 2 Keys & 4 screws for PDC Mounting)

DV402 – Windshield Mount Bracket


DVXC4 Viewing Angle Guideline - Literature Part# INS4001

Please review the DVXC4 Viewing Angle Guideline before making your recoder adjustments

Locate the lock adjusting screw inside the center of the bracket (Photo A)

Using the supplied Alan Key, turn counter clockwise to loosen the screw (Photo B)

Do not remove the screw! Loosen enough to make your adjustment

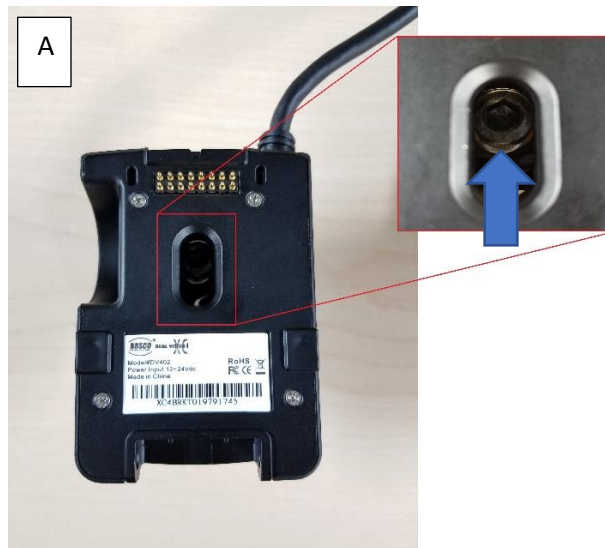

These tools are vehicle specific. Please check the installation guide for your vehicle to ensure the correct angle

Using the Bracket Adjustment Tool for your vehicle, you can preset your angle to Rosco recommended viewing before your install starts.

Wedge the tool in-between the Windshield mounting pedestal & the Recorder cradle (Photo C)



When the Pedestal and cradle hit the tool (Blue Arrows in Photo C), tighten the Alan Key by turning clockwise

Do not overtighten the screw! Bracket damage may occur

Rosco presets the angle shown in the DVXC4 Viewing Angle guideline (INS4001)

