

Installation Guideline

Literature Part#: MNL442: Recorder Mounting & VHB Tape Installation

Related Parts:

Hardware Kit (Temporary & Permanent VHB Tapes with Primer Pen, Allen Wrench, 2 Keys & 4 screws for PDC Mounting) - DV443

Windshield Mount Bracket – DV402

IMPORTANT: VHB Tape should only be applied when windshield temperature is within 50°F-100°F (10°C-38°C) to allow proper curing of mounting adhesive pads.

- Heat the windshield with a heat gun or by running the defrost on high heat. If temperatures exceed freezing conditions it's best to use a heat gun only, not the vehicles defrost.
- If using a heat gun, make sure you keep the heat gun at a safe distance from the windshield and keep moving to prevent damage to the glass
- Clean the mounting area with **Non-Alcoholic glass cleaner. DO NOT USE WINDEX!**
DO NOT USE RUBBING ALCOHOL TO CLEAN THE WINDSHIELD
- Skip this step If you do not have a Non-Alcoholic glass cleaner & your windshield is free from grease & debris

Use the Temporary adhesive pad to test mount the recorder.

DO NOT USE THE PRIMER TO ATTACH THE TEMPORARY PAD



ONLY INSTALL THE PRIMER & PERMANENT TAPE WHEN YOU ARE SURE OF YOUR MOUNTING LOCATION



Installation Guideline




Squeeze to release primer & apply Primer to the Windshield



Apply Primer to the Bracket



Wait for Primer to dry

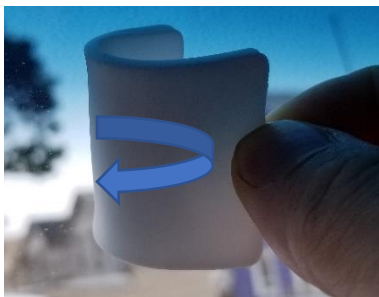

Roll VHB tape on to prevent air pockets



Mount the Recorder to the VHB tape



No air bubbles on windshield

After mounting the Recorder apply pressure for 30 seconds.

When mounting the recorder, pay attention to the angle of the windshield. Always make sure the camera lens of the recorder is pointing straight out of the windshield. Please refer to the DVXC4 viewing angle Installation Guideline for complete Recorder angle information.

